


9000 Series Pull Trim Instructions


Cylinder specifications, installation and handle installation. See proper template when required.

Rectangular grips not shown, replace "T" with "R", ie. HRT05M

Note: For concealed vertical rod devices. Add "CV" to trim designation. ex. HTT05CV



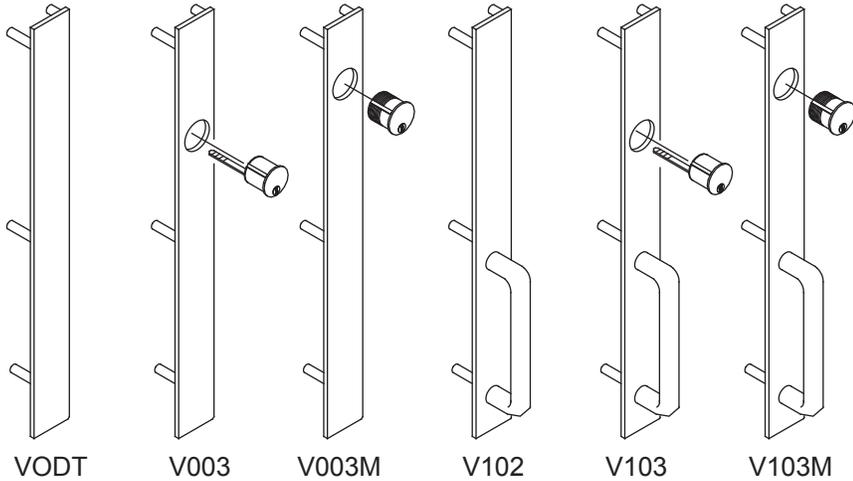


Note: For use of cylinders over 1 3/8" in length, a spacer ring is required on exterior side of trim.

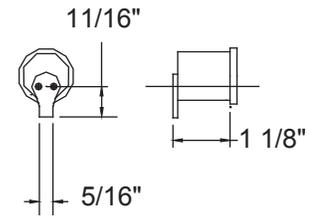

Note: If door is less than 2 1/4" thick tailpiece will have to be cut down.

Note: Trim shipped standard for 1 3/4" thick doors, for 2-2 1/4" thick doors lengthen inner spindle as shown. On 2" thick doors spindle will have to be cut down 1/4".

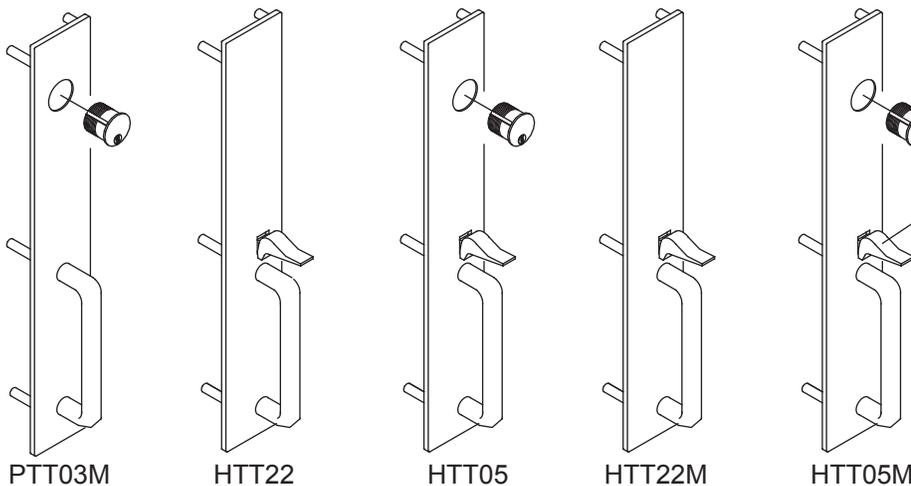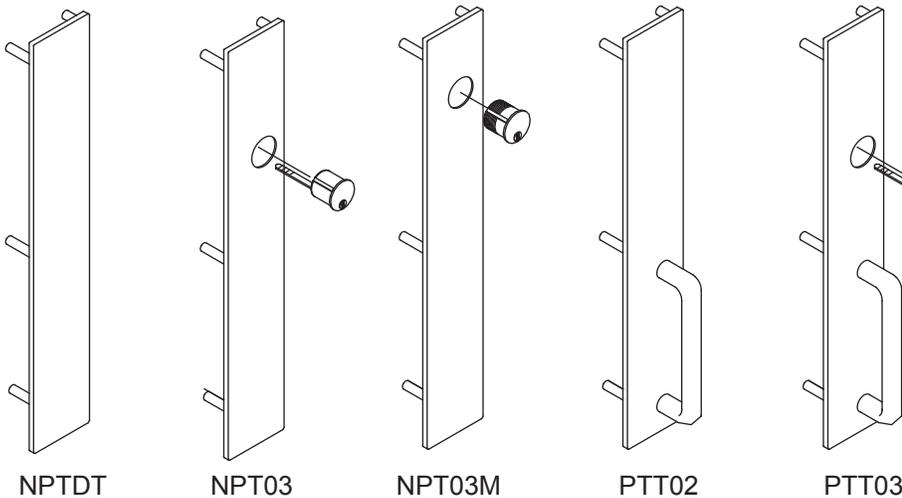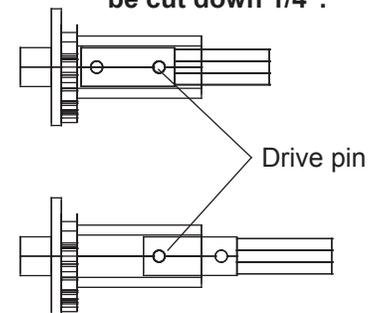

On 22M and 05M trims, thumb piece is held in place by a band for shipping. Remove prior to installing trim in door. Thumb piece will remain in place once installed.

For "06" function on "T" trim see detail on reverse side for installing cam as on "09" function. Note; Individual cam on rear of cylinder can not be used on "T" trim.